



1. Spacerring with 1.25mm thickness

Attention: This information is for the first and second lot.

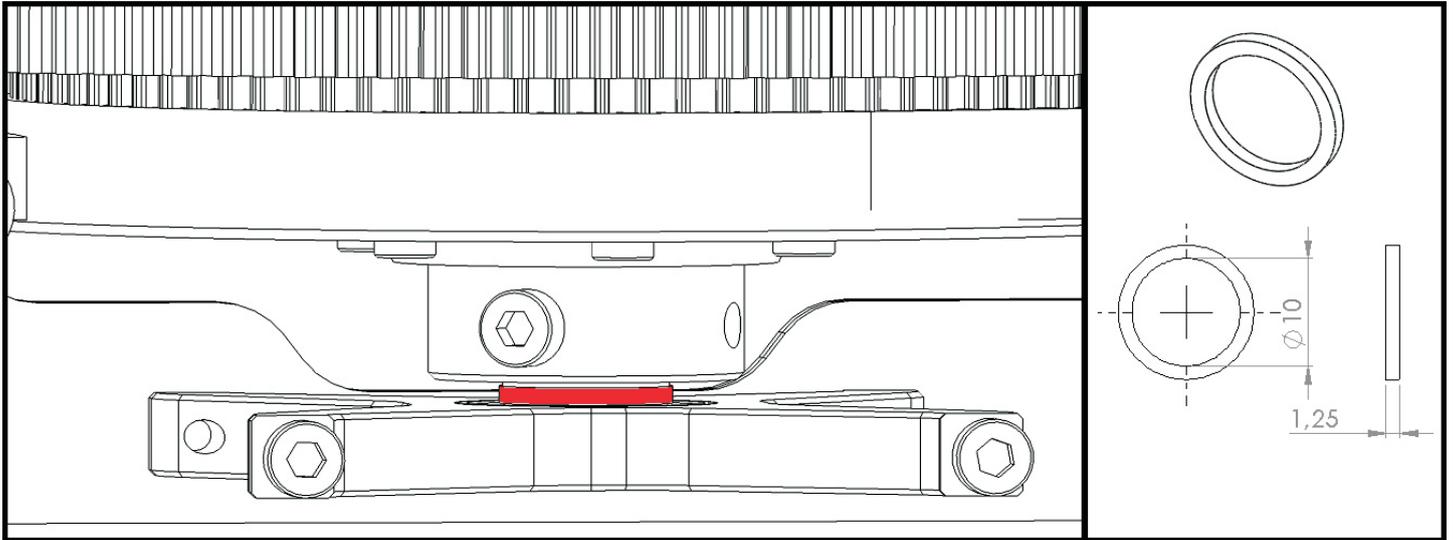


This 1.25mm thick spacer-ring need to be assembled between the oneway-sleeve and the lowestet bearingblock.

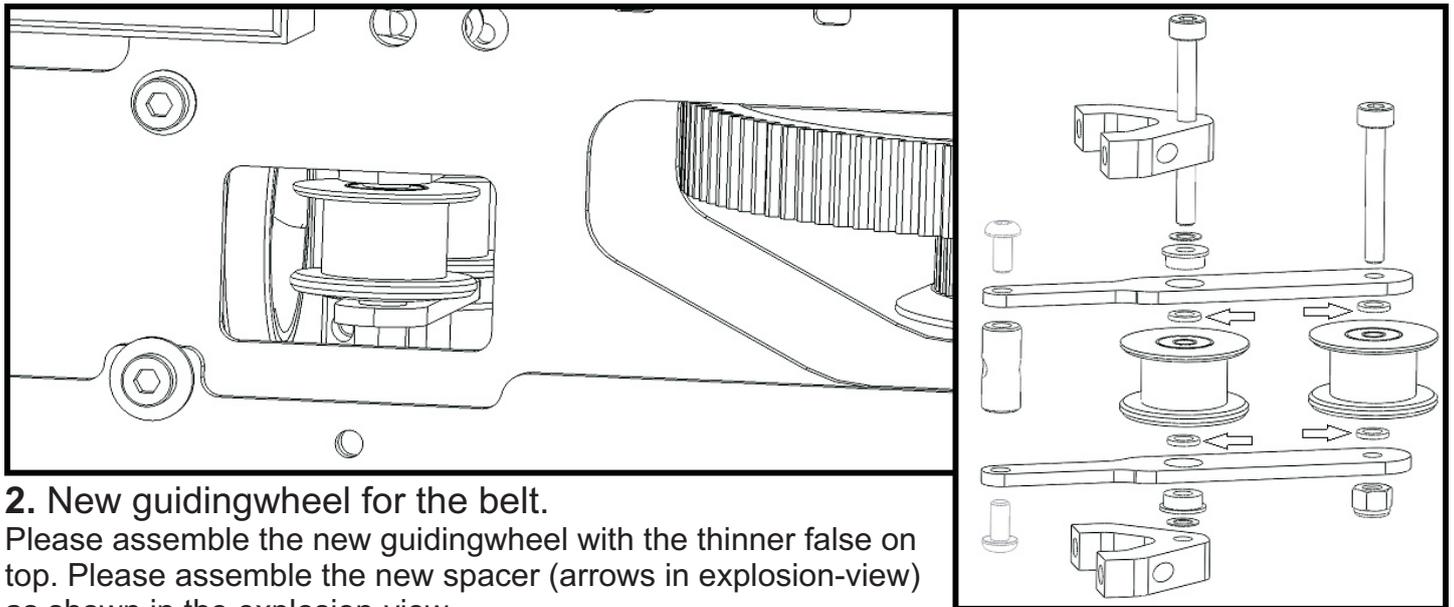

2. New guidingwheel for the belt.

Please assemble the new guidingwheel with the thinner false on top. Please assemble the new spacer (arrows in explosion-view) as shown in the explosion-view.

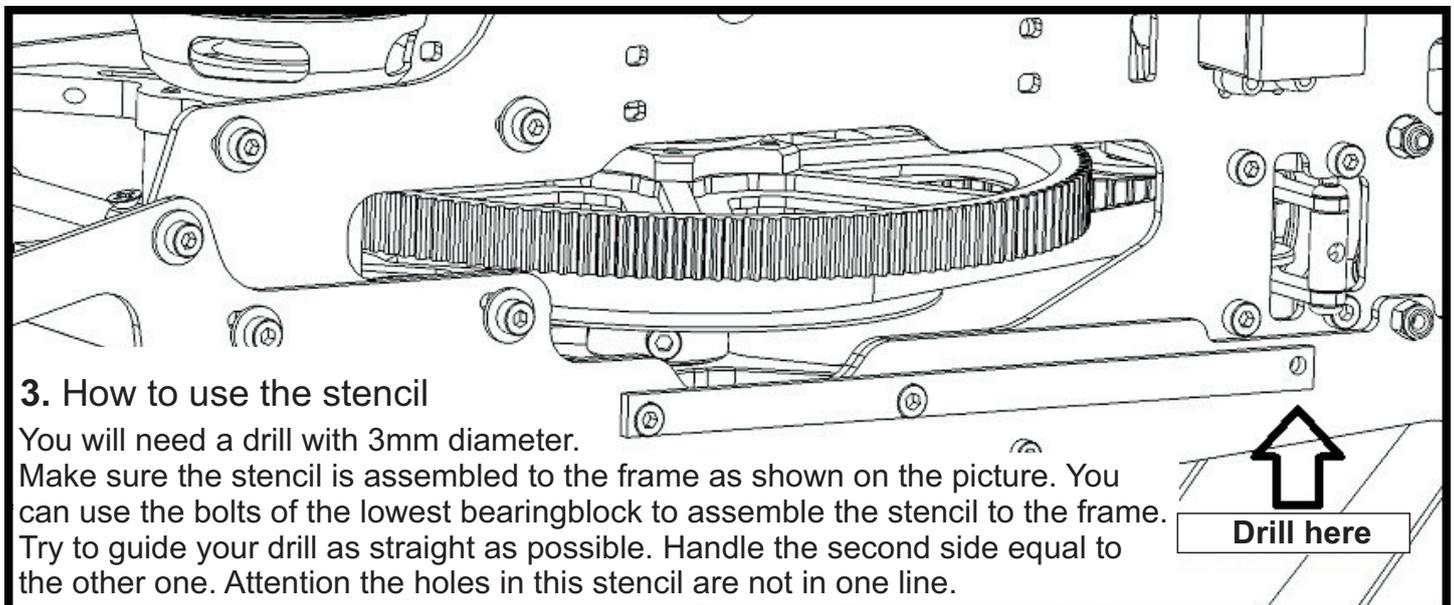

3. How to use the stencil

You will need a drill with 3mm diameter.

Make sure the stencil is assembled to the frame as shown on the picture. You can use the bolts of the lowest bearingblock to assemble the stencil to the frame. Try to guide your drill as straight as possible. Handle the second side equal to the other one. Attention the holes in this stencil are not in one line.

