
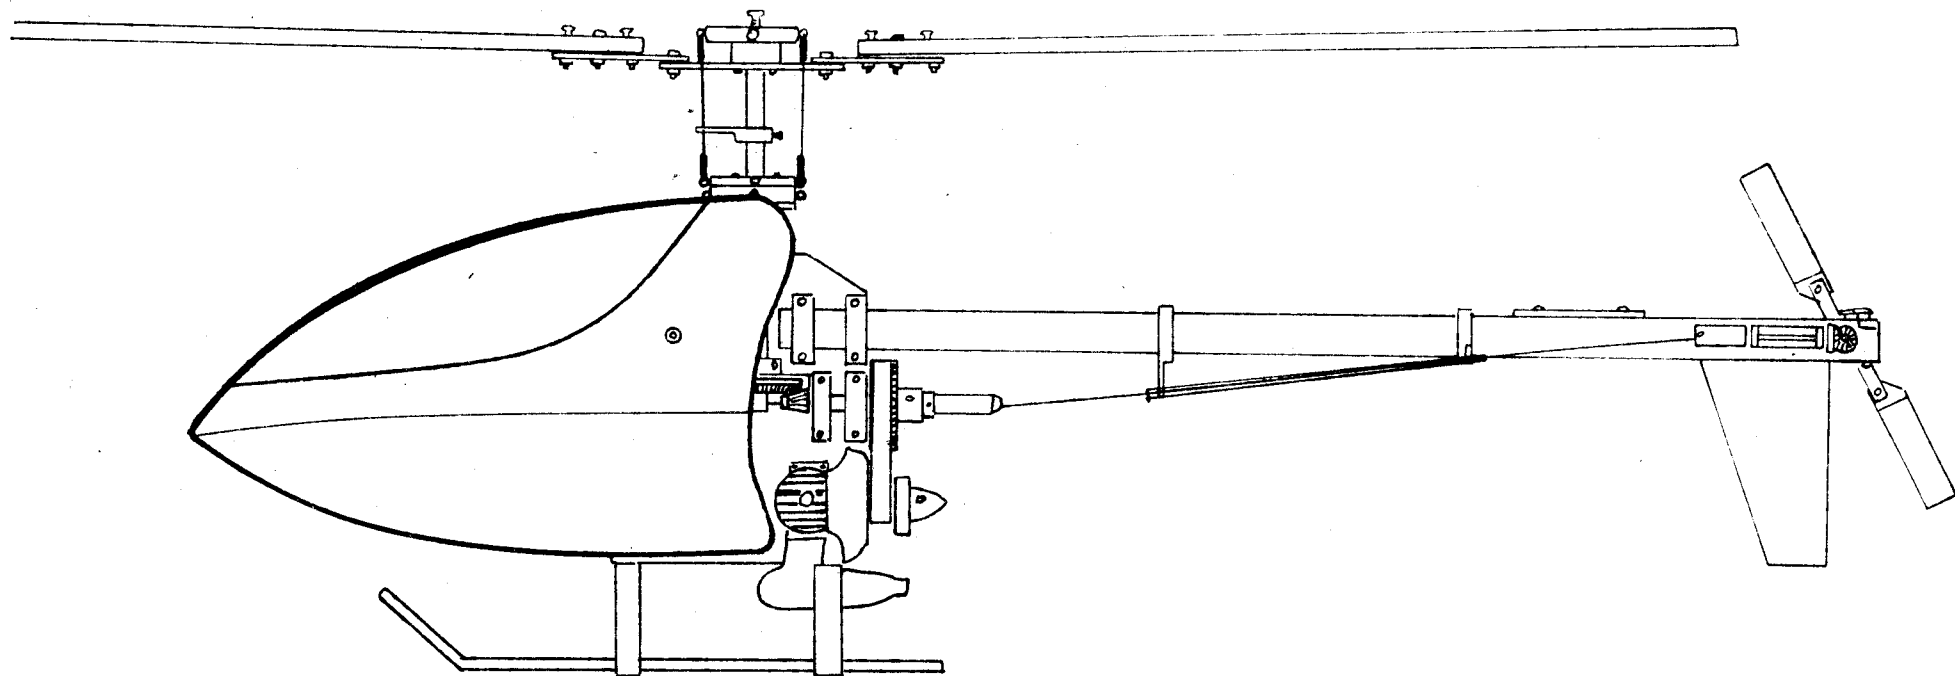


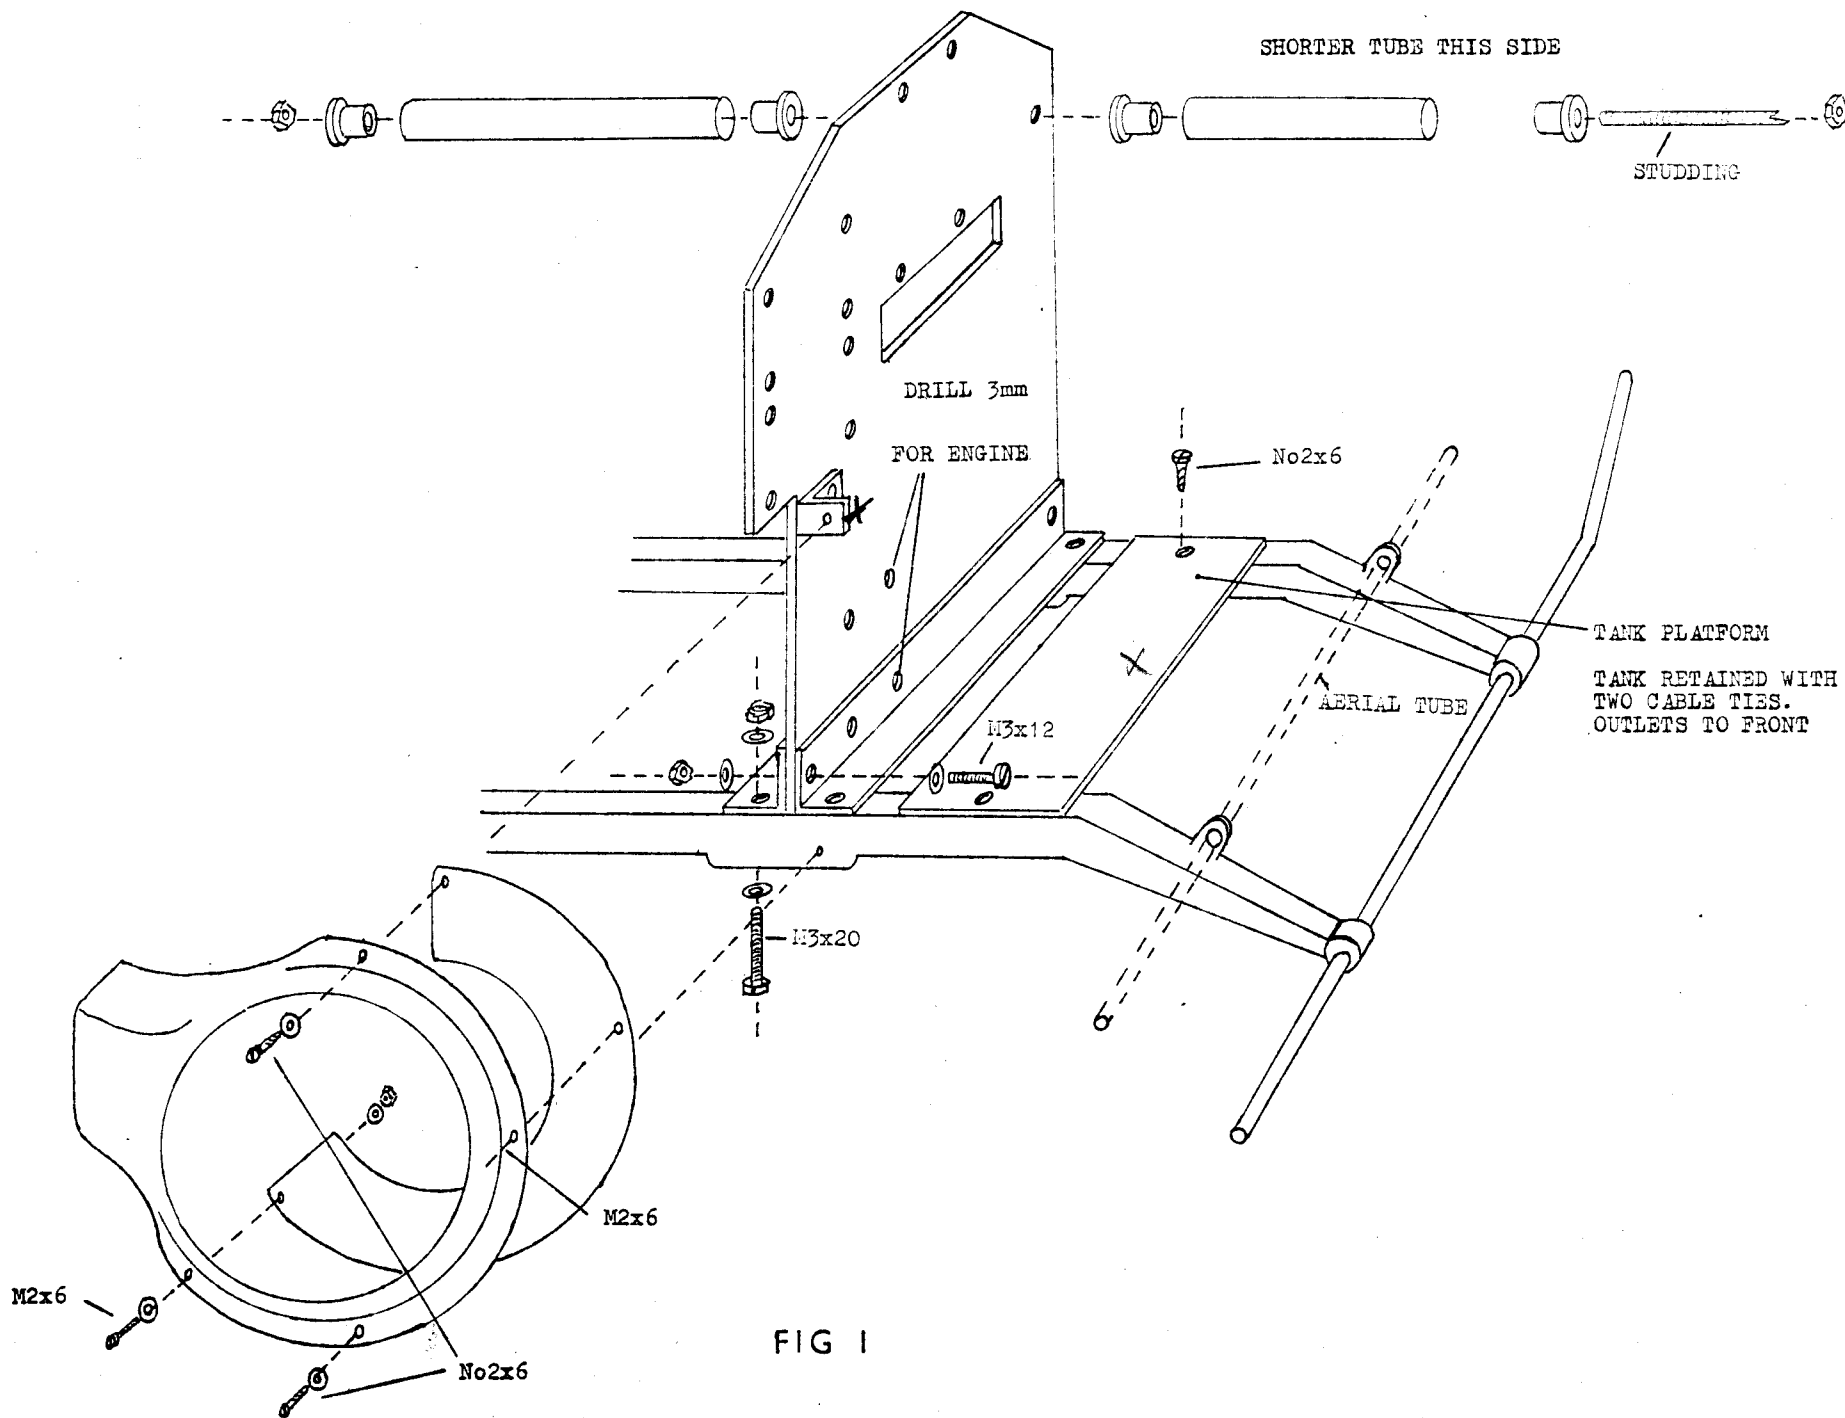

TYKE





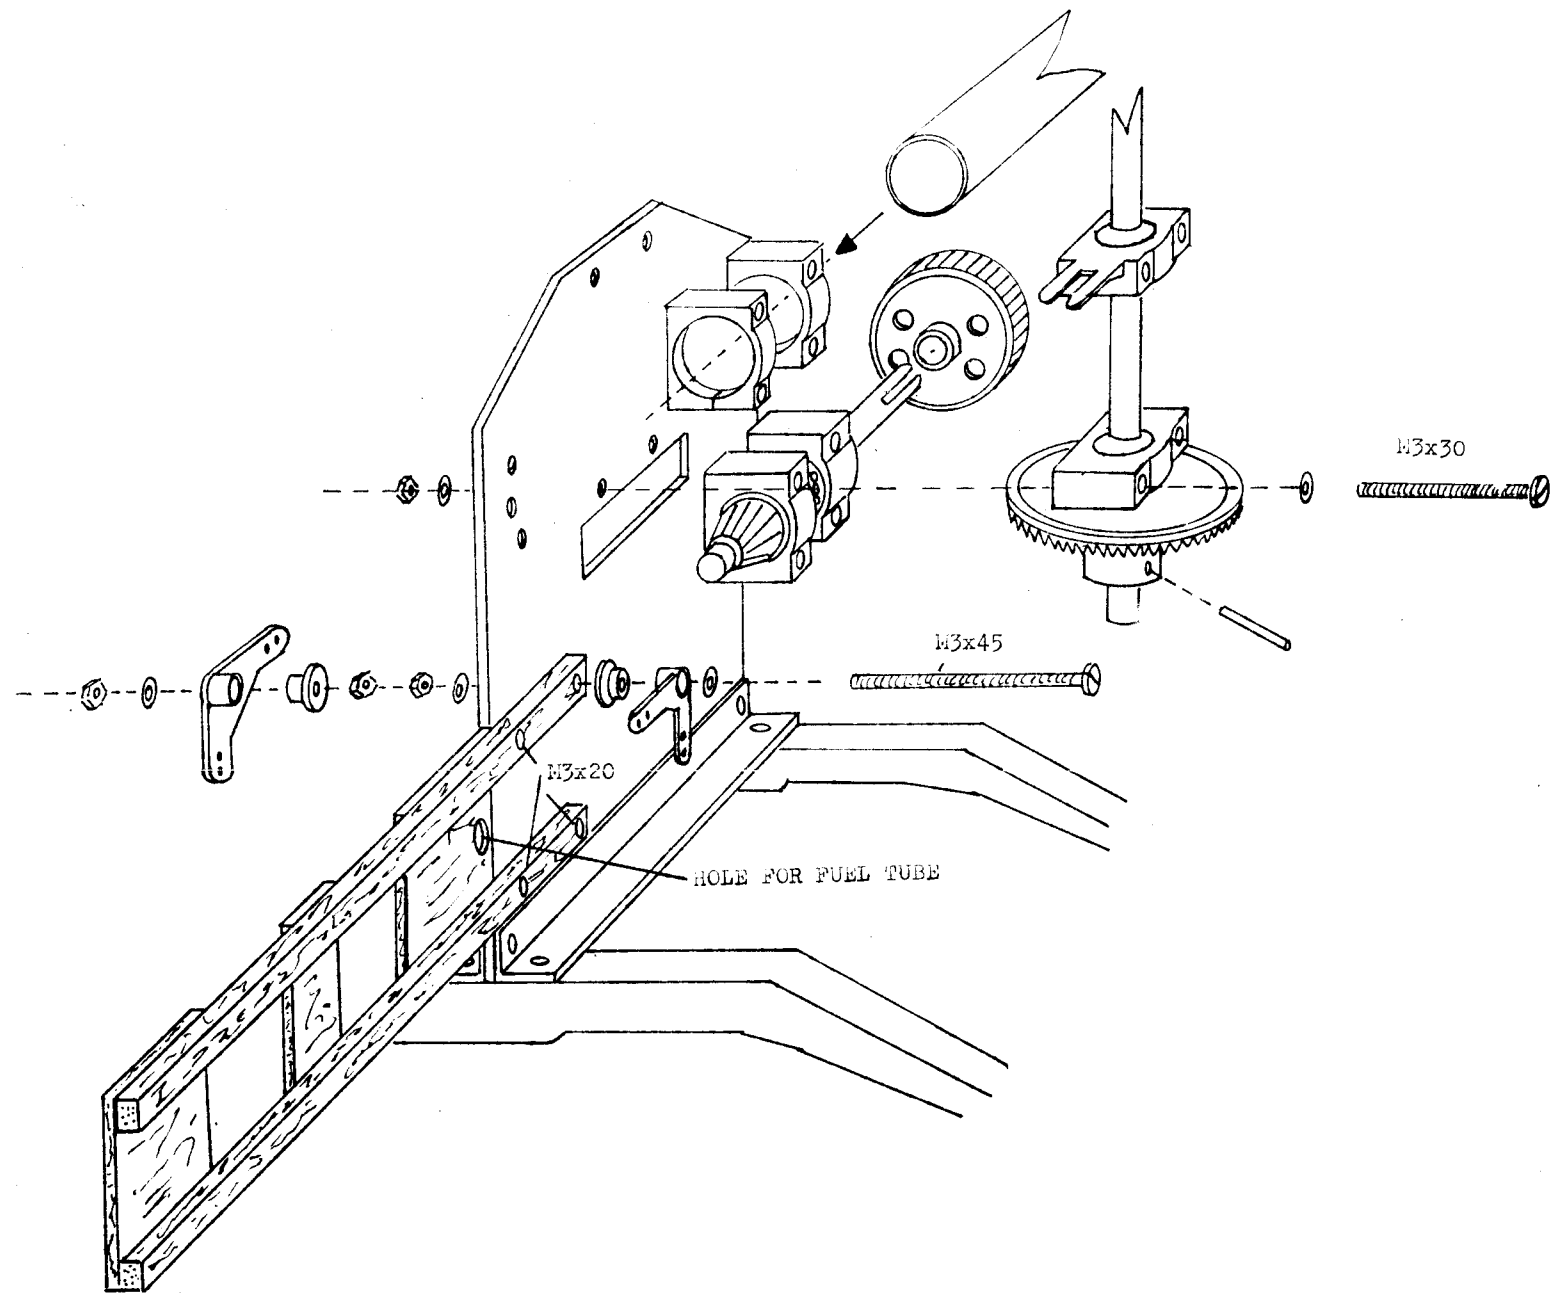


FIG 2

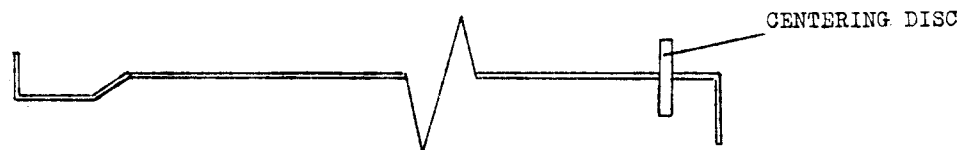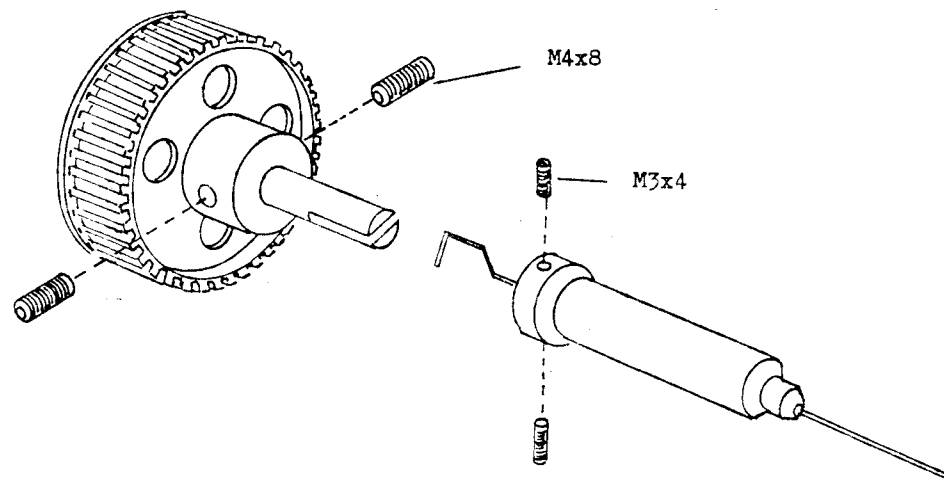

BEND TAIL DRIVE WIRE THUS

FULL SIZE

FIG 7


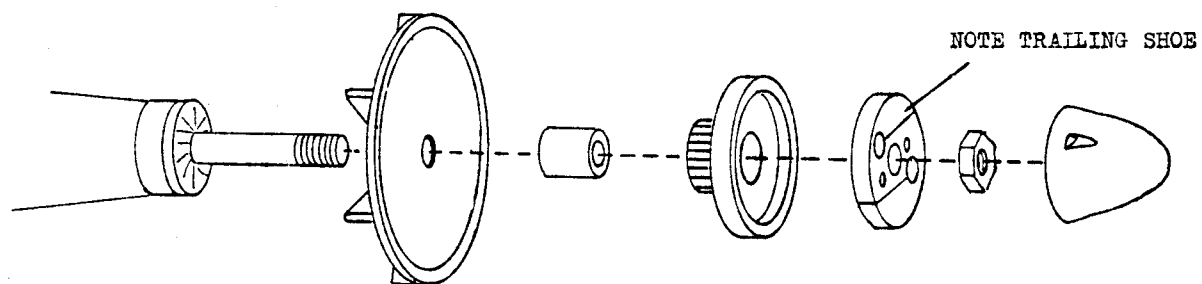


FIG 3

FAN/CLUTCH ASSEMBLY

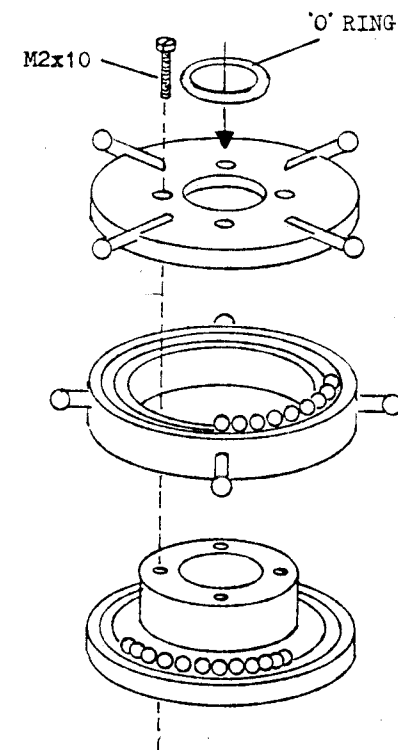

SWASHPLATE

FIG 5

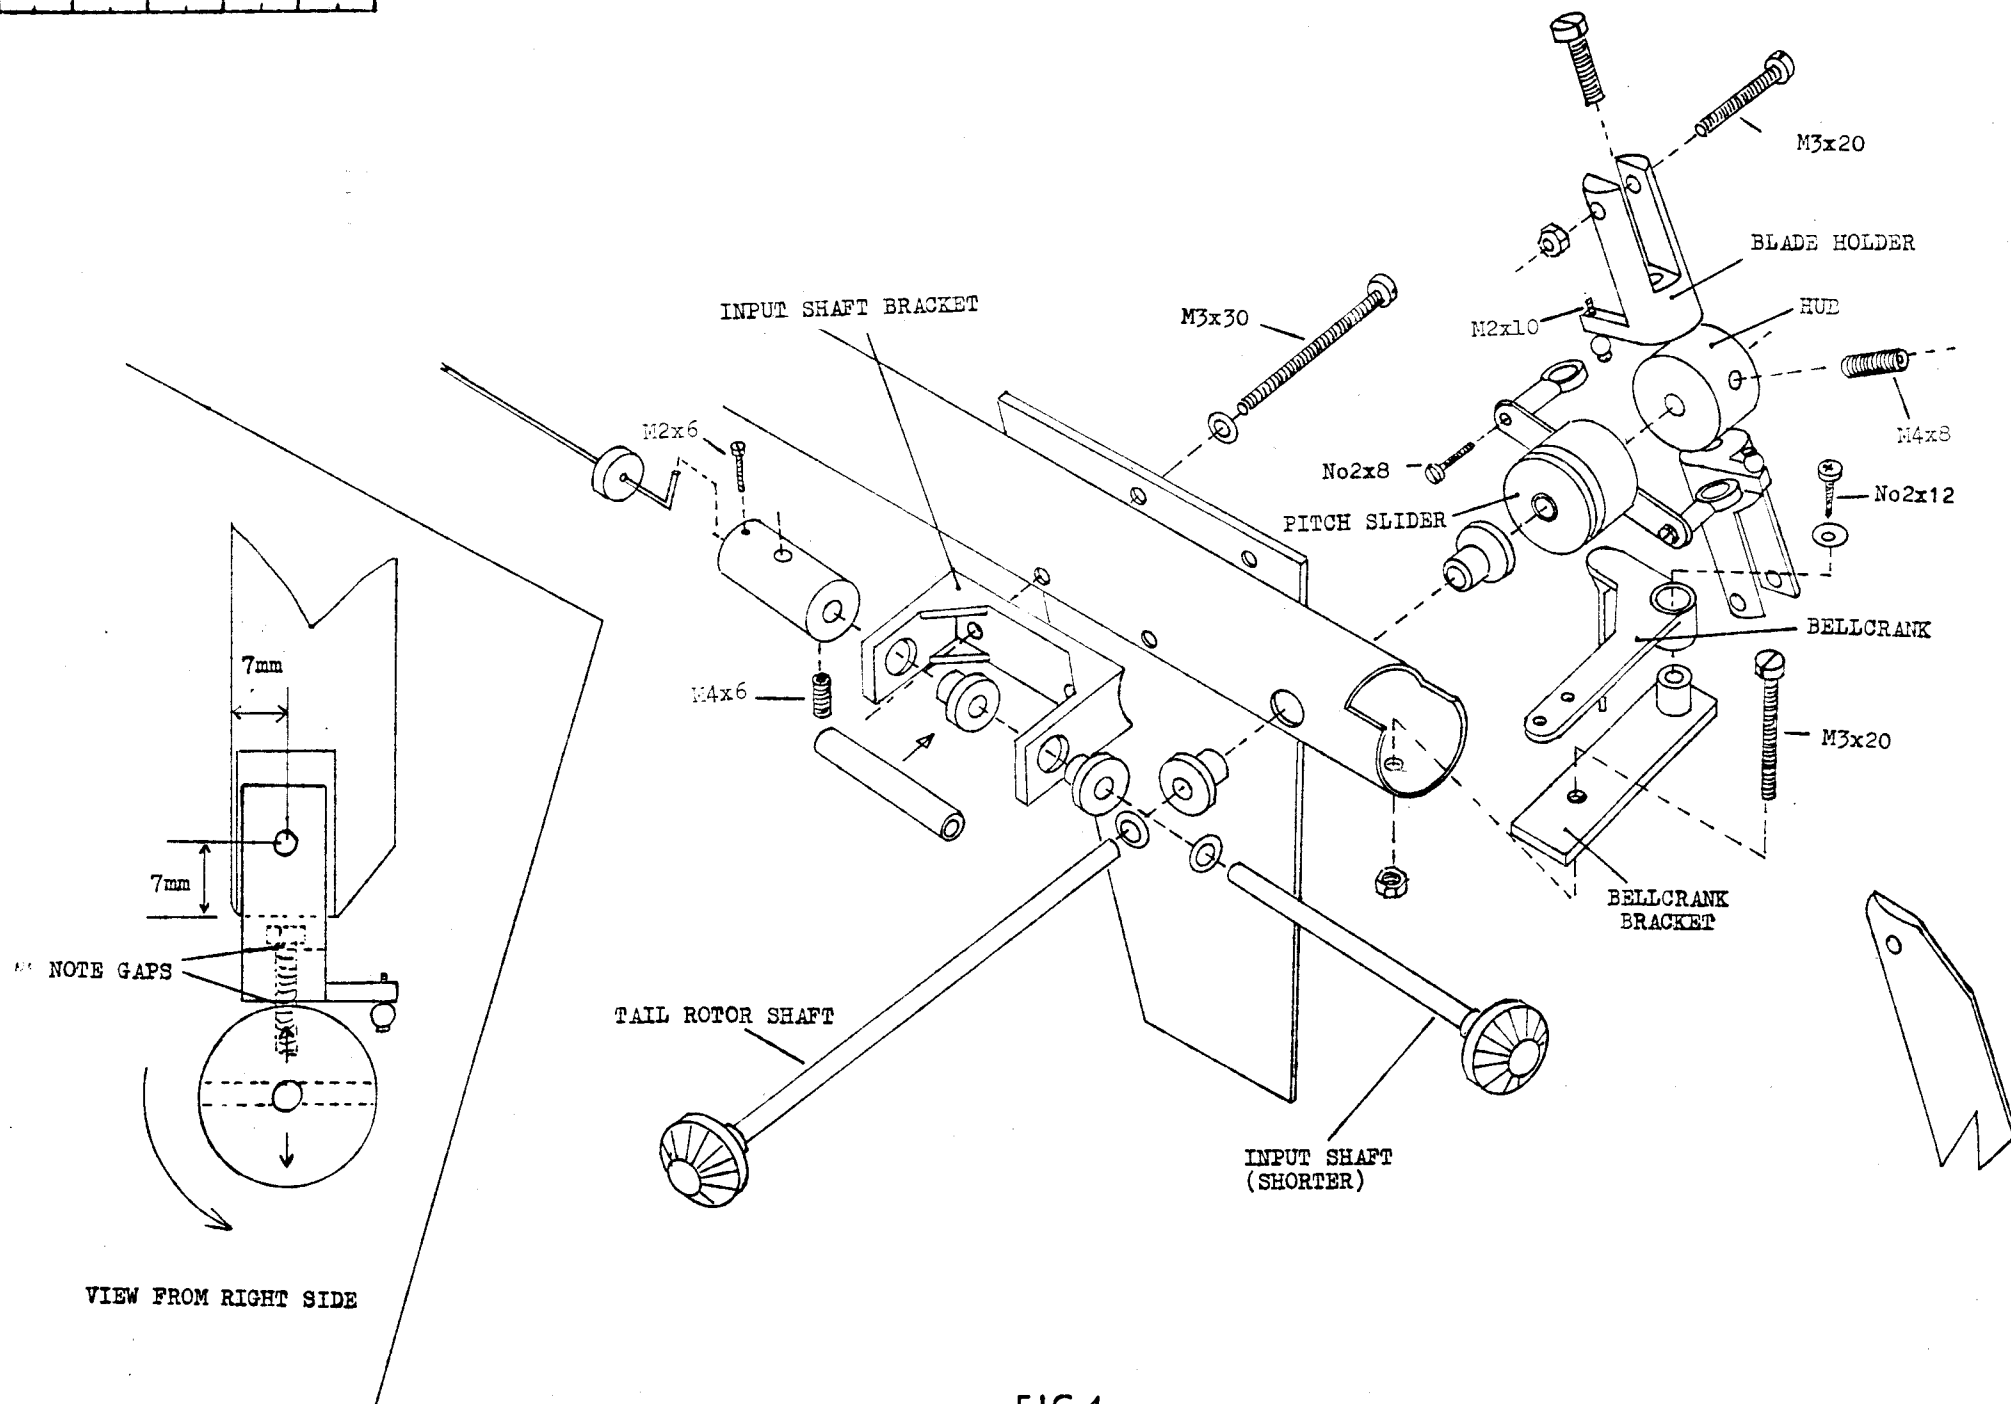



FIG 4



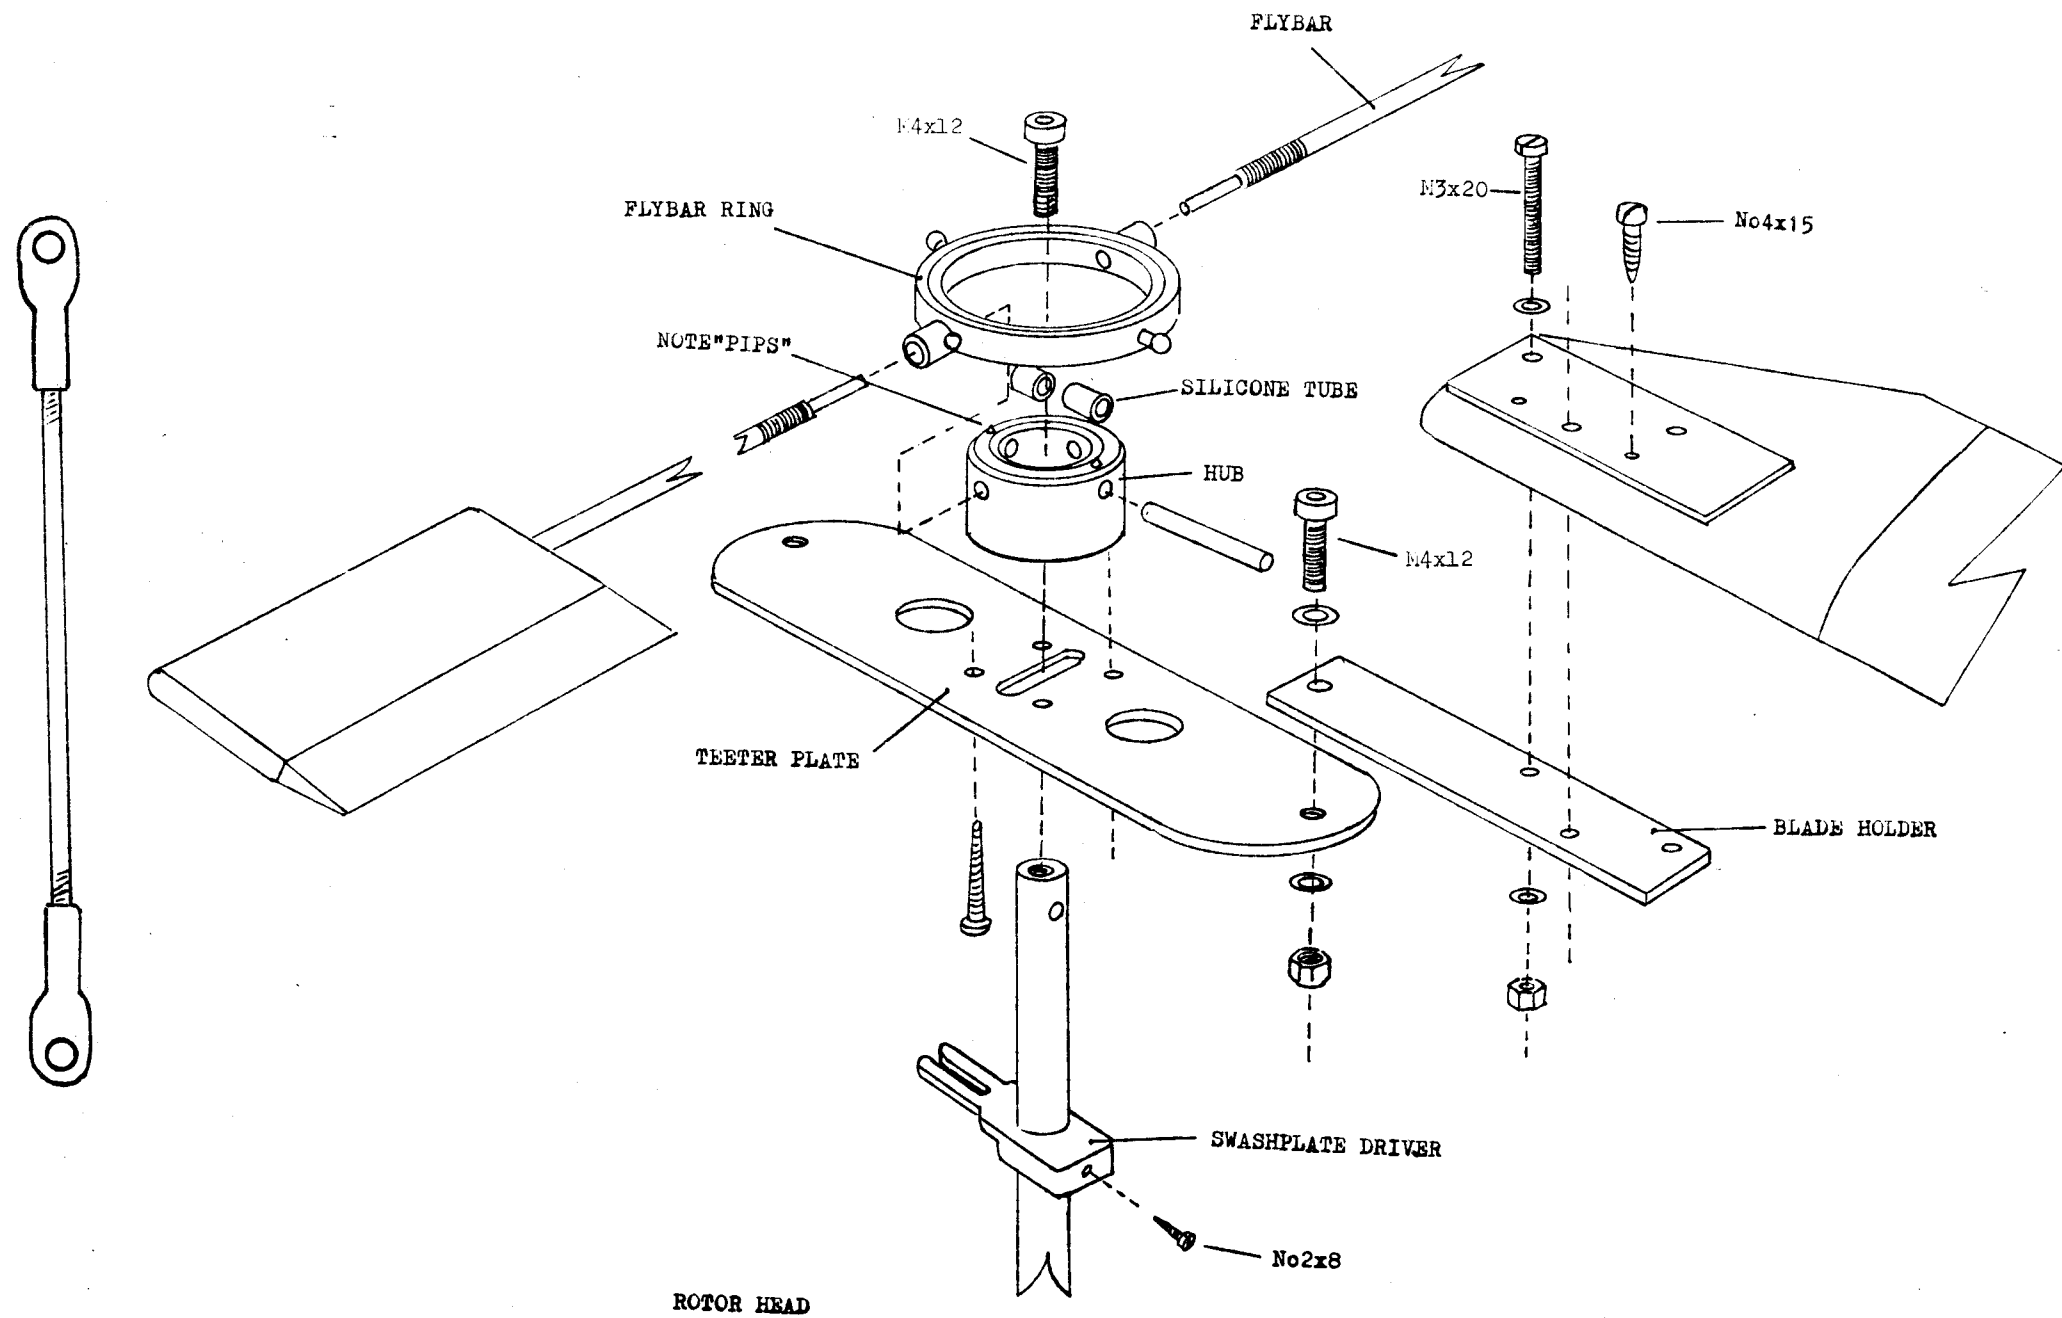


FIG 6




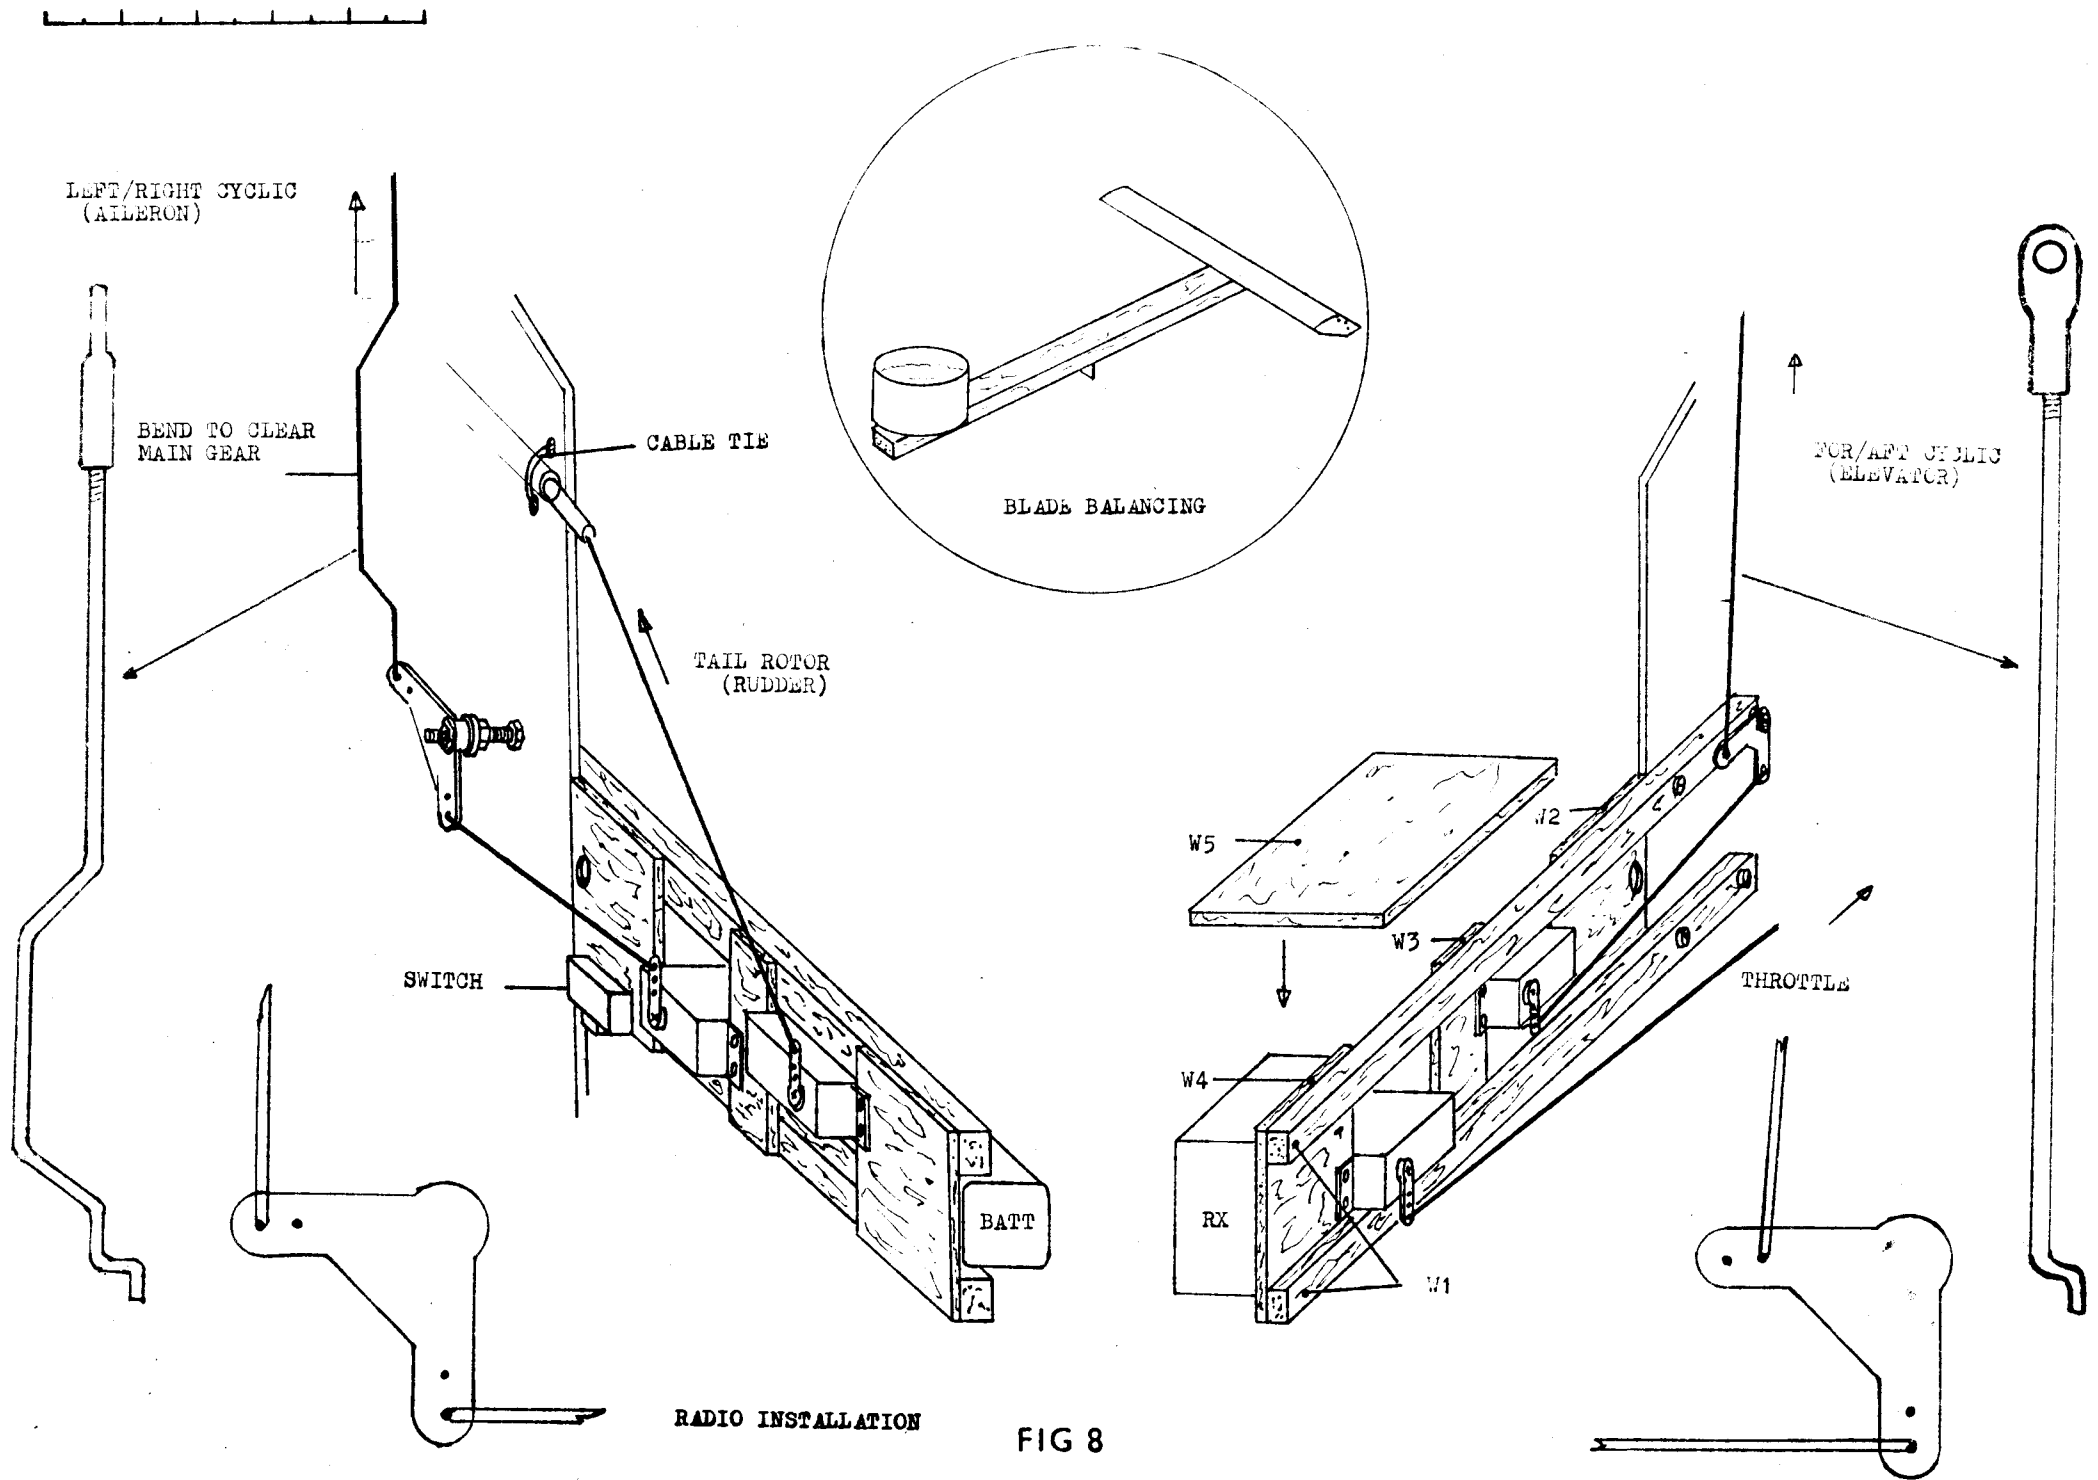

ROUND OFF LEADING EDGE
AND SAND TO SECTION

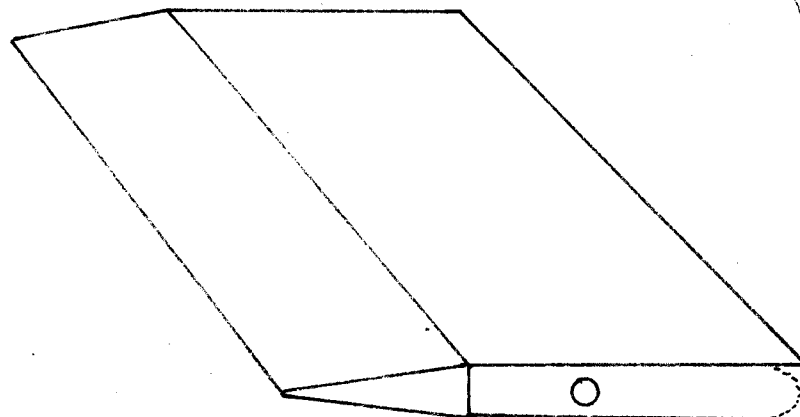

NOTE POSITION OF HOLE
WHEN GLUEING TRAILING EDGE
IN PLACE

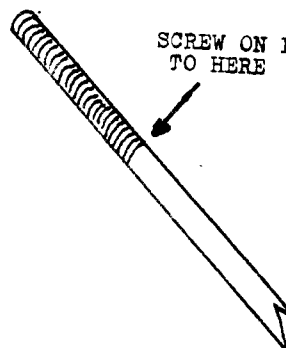

SCREW ON PADDLE
TO HERE

FIG 9

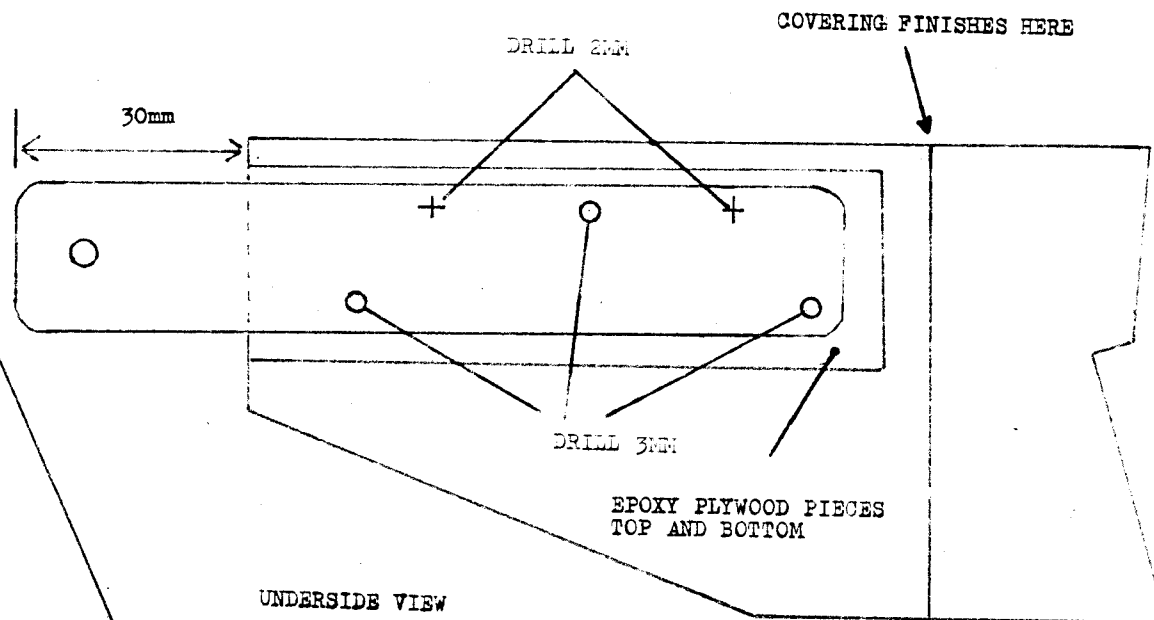


FIG 10

BLADE COVERING



START HERE

FIG 11

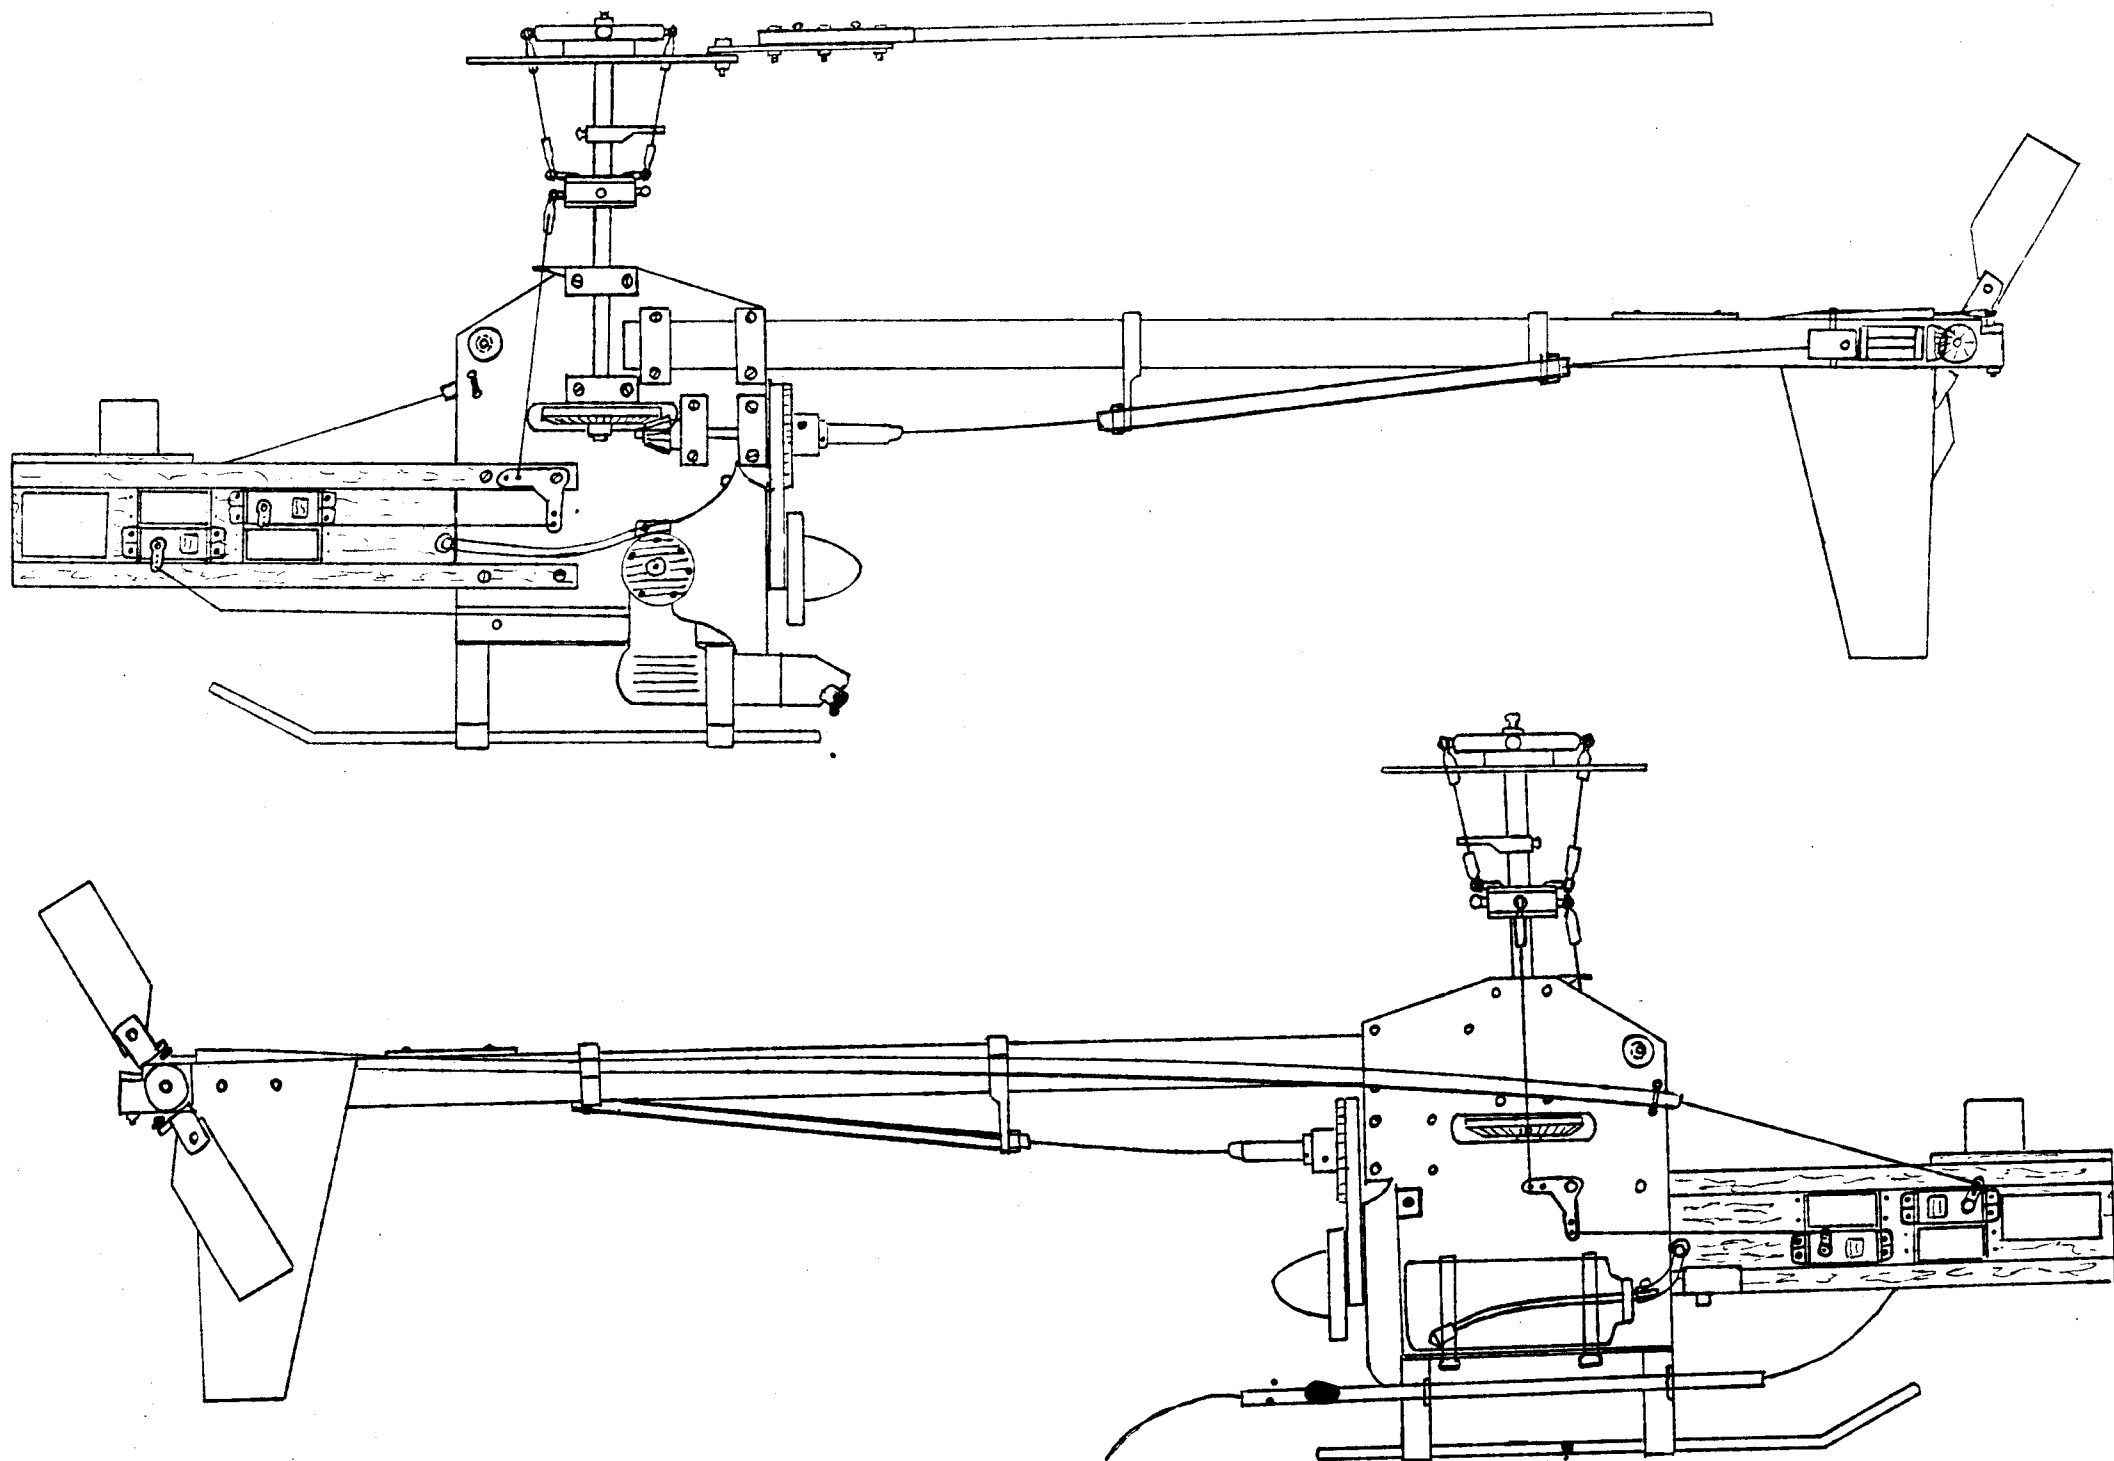


FIG 12